USER GUIDE

Speakeasy 600

Before operating this set,
please read these instructions carefully.

If you need help ...

The Binatone Help Line is available from 9.00am-5.00 pm, Monday to Friday, on **0845 345 9677** (BT Local Call rate)

Or visit our website: www.binatonetelecom.com

Unpacking your Speakeasy 600

In the box are:

- the mobile handset
- a mains power adaptor
- a rechargeable battery pack
- USB data cable
- earphones set
- this user guide

Keep the packing materials for future use.
Keep your sales receipt - it is your guarantee.

IMPORTANT –Your handset is not supplied with a SIM card. The Speakeasy 600 will work on all UK GSM mobile networks except “3”, and you will need to insert a SIM card for the handset to work correctly.

Network Services –The Speakeasy 600 is approved for use on the GSM900 and DCS1800 networks. Check with your mobile phone service provider to see if you can use the Dual-band feature or other Network Services described in this guide. Some networks may not support all language dependent characters and/or services.

Contents

1 WHERE TO FIND IT 8
2 SYMBOLS ON THE DISPLAY 11
3 MENU OPERATION 12
3.1 Navigation keys 12
3.2 Selection keys 12
3.3 Main menu 12
3.4 Writing text and numbers 13
4 Read these notes first 15
5 INSTALLATION AND SETUP 16
5.1 Install SIM card 16
5.2 Insert Battery 17
5.3 Charge Battery 18
5.4 Insert a Memory (micro SD) card 19
6 SWITCHING ON AND OFF 20
7 MAKING & ANSWERING CALLS 21
7.1 Make a call 21
7.2 Answer a call 21
7.3 End a call 21
7.4 Speed dial 21
7.5 Adjust volume during a call 21
7.6 Dial from the phonebook 22
7.7 Dial from the call log 22
7.8 Reject an incoming call 22
8 SOS CALL FUNCTION 23
8.1 Using the SOS call button 23
8.2 Activate / Deactivate SOS Call function 24
8.3 Activate / Deactivate SOS Alarm Ring 24
8.4 Activate / Deactivate SOS SMS 24
8.5 Add SOS numbers 25
8.6 Edit SOS numbers 25
8.7 Delete SOS numbers 26
8.8 Edit SOS SMS Content 26

9 QUICK NUMBER FUNCTION 27
9.1 Add a Quick Number 27
9.2 Call a Quick Number 27
9.3 Edit a Quick Number 28
9.4 Delete a Quick Number 28
10 USING THE PHONEBOOK & SETTING SPEED DIALS 29
10.1 Add a number to the phonebook 29
10.2 Call a contact from the phonebook 29
10.3 Edit a phonebook entry 30
10.4 Delete a phonebook entry 30
10.5 Set speed dial numbers 30
10.6 Turn speed dial on or off 31
10.7 Set My number 31
10.8 Send My number 31
10.9 Set extra numbers 32
10.10 Check memory status 32
10.11 Copy Phonebook contacts 32
10.12 Move Phonebook contacts 33
10.13 Delete All Phonebook contacts 33
11 SMS TEXT MESSAGING 34
11.1 Write and send SMS 34
11.2 Manage your SMS 35
11.2.1 Inbox 35
11.2.2 Drafts 35
11.2.3 Outbox 36
11.2.4 Sent messages 36
11.3 SMS settings 37
11.3.1 Save Sent message 38
11.4 Message Templates 38
11.4.1 Edit Template 38
11.5 Remove Template 39
12. MMS MESSAGING 40
12.1 Create and Send MMS 40
12.2 MMS Settings 41

12.3 Manage your MMS....42
12.3.1 Inbox....43
12.3.2 Drafts....43
12.3.3 Outbox....44
13 BROADCAST MESSAGES....45
13.1 Broadcast message settings....45
14 CALL HISTORY....46
14.1 Check Call history....46
15 CALL SETTINGS....47
15.1 Basic call settings....47
15.2 Advanced Call settings....48
16 MULTIMEDIA....49
16.1 FM Radio....49
16.1.1 Auto tune....49
16.1.2 Manual tune....49
16.1.3 Select from the Channel list....50
16.1.4 Enable / Disable Background play....50
16.1.5 Play the radio through the loudspeaker....50
16.1.6 Record a radio broadcast....51
16.1.7 Set recording format....51
17.1.8 Set audio quality....51
17.1.9 Record storage....52
16.2 Camera....52
17.2.1 Take photos....52
16.3 Zooming in and out....52
16.3.1 Adjust camera exposure....53
16.3.2 View captured photos....53
16.4 Adjust camera settings....53
16.5 Video recorder....54
16.5.1 Record video....54
16.6 Zooming in and out....55
16.7 Adjust camcorder exposure....55
16.8 View recorded videos....55
16.9 Adjust camcorder settings....56
16.10 Audio player....57

16.11 Sound recorder....59
17 USER PROFILES....60
17.1 Activate a User profile....60
17.1.1 Customise a User profile....60
18 SETTINGS....62
18.1 Dual SIM settings....62
18.2 Phone settings....62
18.3 Network settings....63
18.4 Security settings....63
18.5 Restore factory settings....64
19 ORGANIZER....64
19.1 Alarm....64
19.1.1 Set an alarm....64
19.2 Tasks....65
19.2.1 Set a task....65
19.2.2 Manage the task list....67
19.3 Bluetooth....67
19.3.1 Connecting to a Bluetooth device....68
19.3.2 Connect to a previously connected device....69
19.3.3 Rename a device in the device list....69
19.3.4 Delete a device from the device list....69
19.3.5 Getting connected by a Bluetooth device....70
19.3.6 Listen to music or audio files through a Bluetooth headset....70
19.4 Calculator....70
19.5 Calendar....71
19.6 World clock....72
19.7 Unit converter....72
19.8 Currency converter....73
19.9 Stopwatch....73
19.10 Fun & Games....74
19.11 Ebook reader....75
19.12 File manager....77
20 SERVICES....79
20.1 Access Services....79

20.2 Network provider menu 79
20.3 Internet service....80
20.3.1 Browsing the Internet....80
20.3.2 Settings....80
20.4 Data account....80
21 SMS REMOTE CONTROL 81
21.1 Set quick number....81
21.2 Set SOS number....81
21.3 Add a new entry....82
21.3 Set alarm 82
22 TROUBLESHOOTING....84
23 GUARANTEE AND SERVICE INFORMATION....86
23.1 Servicing Under Warranty 86
23.2 Servicing After Warranty Has Expired 87
24 BATTERY INFORMATION....88
25 ADDITIONAL SAFETY INFORMATION....89
26 TECHNICAL DATA 91
27 DECLARATION OF CONFORMITY....92

1 WHERE TO FIND IT

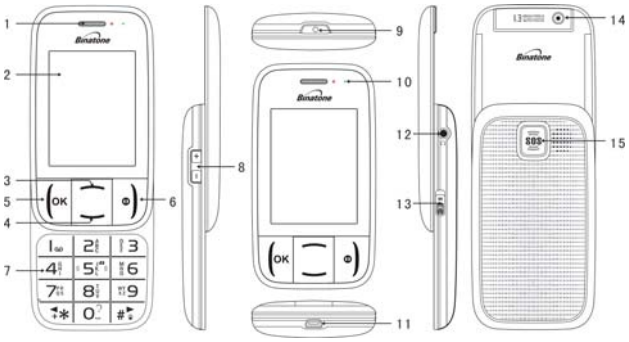

1	Earpiece	
2	LCD Screen	
3	Key	Scroll up a menu or options list. *Home screen mode*: Press to enter the main menu. *Editing mode*: Move cursor *During a call*: Press to switch to handsfree mode.
4	Key	Scroll down a menu or options list. *Home screen mode*: Press to enter the **Quick Number** list. *Editing mode*: Move cursor

5	Key	Press to answer a call or put the current call on hold. Press to select the function shown above it on the display.
6	Key	Press and hold to power up or power down the phone. Press to reject a call, end active or held calls. Press to select the function shown above it on the display.
7	Microphone & Alphanumeric Keypad	*Editing mode*: Press # to switch input mode; Press * to enter symbols; Press 0 to insert space *(except 123 mode)* *Calculator mode*: Press # to enter decimal point *Camera/Video mode*: Press 5 to take picture/record video
8	+ / − volume keys	*During a call*: Press + or − to increase or decrease the earpiece or speaker volume. *Home screen mode*: Press + or − to increase or decrease ringer volume. *Audio listening mode*: Press + or − to increase or decrease the volume.
9	Torch Light	

10	Status Lights	Red light on when charging. Red light flashes when there is no link to a mobile network. Blue light flashes when linked to the SIM network.
11	Charger / Data Transfer Connector	Connect power cable to charge phone battery from the mains power socket. Connect USB data cable to charge phone battery or transfer data from a computer.
12	Earphones Connector	Connect the supplied earphones for FM radio listening or for use during a call.
13	Slide switch for torch light	Push up to turn on the torch light. Push down to turn off the torch light.
14	Camera/ camcorder lens	1.3 mega pixels (auto focus)
15	SOS key	Press and hold for 3 seconds to send an SOS message followed by an SOS call.

2 SYMBOLS ON THE DISPLAY

The icons in the status bar at the top of the home screen give you information on the current status of your Speakeasy 600.

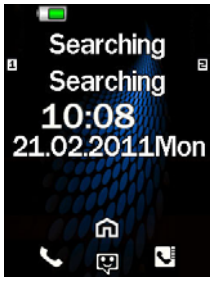

	Signal strength
	Earphones in use
/	New SMS received
	Alarm On
	Keypad locked
	Battery power level
	Bluetooth On
	Ringer On
	Vibration On
	Ring and Vibrate
	Vibrate then Ring

3.1 Navigation keys

Press , , or to move around and highlight an item on the screen. When an item is highlighted, Press **OK** to confirm your selection.

3.2 Selection keys

Apart from making and answering calls, and also serve as selection keys to select the menus or options directly above them on the screen of the phone.

The options for include **OK**, **Option**, **Select**, **Yes**, **Pause**, **List**, **Edit**, **Start**.

The options for include **Back**, **Cancel**, **Reset**, **No**, **Stop**, **Done**, **Abort**, **Split**.

3.3 Main menu

The main menu gives you access to all the different features of your mobile phone.

	Care	*Page 23*
	Phonebook	*Page 29*
	Messaging	*Page 34*
	Call history	*Page 46*
	Multimedia	*Page 49*
	User profiles	*Page 60*

	Settings	*Page 62*
	Organizer	*Page 64*
	Services	*Page 79*

1. From the home screen, press to access the main menu.
2. Press or to scroll through the menu list.
3. Press **OK** to enter a sub-menu.
4. Press **Back** to exit.
5. Slide the phone closed to return to the home screen.

3.4 Writing text and numbers

Speakeasy 600 supports the following input modes:

1. Abc
2. ABC
3. abc
4. 123

Press 2 to 9 keys that are marked with the corresponding letter you wish to enter. Press once to get the first letter on the key, press twice quickly to get the second letter and so on until the letter you want is displayed on the screen.

Switch input mode	Press # to scroll through the options.

Enter punctuations/ symbols	Press * to show the options. Press ◁, ▷, * or # to select the punctuation or symbol and press OK **OK** to confirm.
Insert a space	Press 0 (except 123 mode).
Delete text	Press C **Clear** to delete the character before the cursor. Press and hold C **Clear** to delete all the characters entered.
Move cursor	Press ◁ or ▷.

4 Read these notes first

Your phone is an electronic product and should be treated with care to meet any warranty and safety obligations.

- **SWITCH ON SAFELY** – Do not switch on when mobile phone use is prohibited or when it may cause interference or danger.
- **HEARING AID FRIENDLY** – This phone is hearing aid friendly. Mobile phone may interfere with some hearing aids, please contact your hearing aid provider.
- **WATER-RESISTANCE** – Keep it dry. The phone is not water-resistant.
- **TEMPERATURE RANGE** – Operating -10°C to 40°C. Storage -20°C to 55°C.
- **CARE & CLEANING** – Do not drop or knock the phone excessively, and keep it clean using a damp cloth if necessary - do not use chemicals, cleaning solvents, or strong detergents.

5 INSTALLATION AND SETUP

To use Speakeasy 600, you must first insert a valid SIM card supplied by your network provider. The SIM card contains your subscription information, your mobile telephone number, and a memory in which you can store phone numbers and messages.

5.1 Install SIM card

Speakeasy 600 supports the use of two SIM cards in one phone. Follow these instructions to insert the SIM cards. If only one SIM card is to be inserted, you can use either slot. See ***Dual SIM settings on page 62*** for more information.

1. Make sure that the phone is switched off.
2. Remove the back cover.

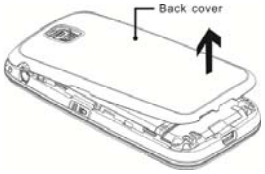

3. Slide the SIM card into **SIM1** or **SIM2**. Make sure that the metal contact of the card is facing down and the beveled corner is in the direction as shown in the picture.

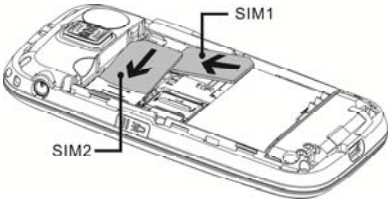

5.2 Insert Battery

1. Align the gold contacts of the battery with the corresponding connectors in the battery compartment.

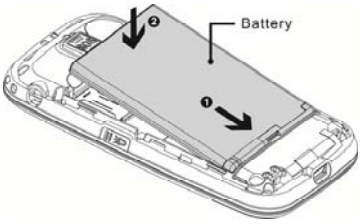

2. Push down the battery until it clicks into place.
3. Replace the back cover by aligning the back cover tabs with the notches located in the back panel.
4. Close the back cover by pushing it down until it clicks into place.

5.3 Charge Battery

Speakeasy 600 is powered by a rechargeable battery. New batteries are only partially charged when shipped. Before you start using your phone, you need to charge the battery for at least 12 hours.

1. Connect the supplied power adaptor to a wall outlet.
2. Connect the power cord to Speakeasy 600 as shown in the picture. The battery charging indicator starts scrolling and the red status light turns on.

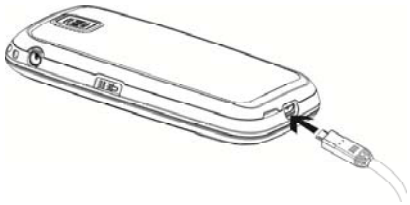

1. The charging indicator stops scrolling when the battery is fully charged.
2. Disconnect the charger.

Tips:
You can also charge Speakeasy 600 by connecting it to a computer using the supplied USB data cable.

If the battery is totally flat, it may take a while before the charging indicator starts scrolling.

Battery performance depends on your usage patterns.

Caution:
Risk of explosion if the battery is replaced by an incorrect type.
Dispose of used batteries according to the instructions.

IMPORTANT
Use only the rechargeable battery that is provided with your Speakeasy 600.

5.4 Insert a Memory (micro SD) card

If you want to download music or pictures using Bluetooth, record Audio or Video, or store many photos, you will need to insert a micro SD memory card to store these files.

1. Make sure that the phone is switched off and remove the back cover, as described in ***Install SIM card on page 16***.
2. Slide the SD card holder open and insert the micro SD card into the holder, making sure that the metal contacts of the card are facing down.
3. Slide the SD card holder closed, and replace the battery and back cover.

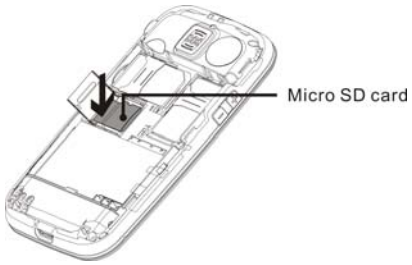

6 SWITCHING ON AND OFF

To switch the phone on and off

To switch off, press and hold until the display clears.

To switch back on, press and hold until the display turns on.

Warning! Do not switch on when mobile phone use is prohibited or when it may cause interference or danger.

7 MAKING & ANSWERING CALLS

7.1 Make a call

1. Slide the phone open.
2. Enter the phone number using the keypad and press [OK] twice. *(When you install two SIM cards, you can select SIM1/SIM2 voice call)*

7.2 Answer a call

1. When the phone rings, slide the phone open or press [OK] to answer the call.
2. If you are using the supplied earphones, press the earphone button to answer the call.

7.3 End a call

1. Slide the phone closed or press [•)].
2. If you are using the supplied earphones, press the earphone button to end the call.

7.4 Speed dial

1. Slide the phone open.
2. Press and hold the speed dial number ([2 abc] to [9 wxyz]) to dial out the number. (see ***Set speed dial numbers on page 30***)

7.5 Adjust volume during a call

Press [+] / [−] volume keys on the side of the phone.

7.6 Dial from the phonebook

1. From the home screen, press to access the **Phonebook**.
2. Enter the first letter(s) of the name, and/or scroll to the name, then press twice to call the number. *(When you install two SIM cards, you can select SIM1/SIM2 voice call)*

7.7 Dial from the call log

1. From the home screen, press to access the **Call Log**.
2. Scroll to the name or number you wish to call and press twice to call the number. *(When you install two SIM cards, you can select SIM1/SIM2 voice call)*

7.8 Reject an incoming call

Press .

8 SOS CALL FUNCTION

IMPORTANT: Make sure that the SOS Call Function is activated (*see Activate / Deactivate SOS Call function on page 24*)
The SOS Call button works even when the phone is locked.

In an emergency situation, you can make an SOS call by pressing the blue SOS call button located at the back of the phone. It enables the user to quickly call up to 5 different numbers for help.

8.1 Using the SOS call button

1. Press and hold the blue SOS call button, located at the back of the phone, for at least 3 seconds.
   *If SOS Alarm Ring is activated (see **Activate / Deactivate SOS Alarm Ring on page 24**), an alert tone will be issued for 3 seconds, unless the handset is in silent mode.*
2. The phone will then send the SOS message (see ***Activate / Deactivate SOS SMS on page 24***) to all the programmed SOS numbers, followed by a call to the first SOS number.
   The phone will switch to handsfree mode if the call is successfully connected.
3. If the first call cannot be connected, the phone will call the next SOS number (if available) and will keep calling the SOS numbers in turn, until finished 3 cycles and then stop.
4. To cancel the SOS operation at any time, press .

8.2 Activate / Deactivate SOS Call function

If the **SOS key** setting is deactivated, pressing the blue SOS call button will not initiate the SOS sequence, and a warning note will be shown on the display.

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Care** > **SOS key**.
3. Scroll to **Settings** and select **Activate** or select **Deactivate**.

8.3 Activate / Deactivate SOS Alarm Ring

If the SOS Alarm Ring is deactivated, pressing the blue SOS call button will initiate the SOS sequence, but the 3-second alert tone will not be played.

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Care** > **SOS key**.
3. Scroll to **SOS Alarm Ring** and select **Activate** or select **Deactivate**.

8.4 Activate / Deactivate SOS SMS

If the SOS SMS is deactivated, pressing the blue SOS call button will initiate the SOS sequence, but the SMS message will not be sent.

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Care** > **SOS key**.
3. Scroll to **SOS SMS** and select **Activate** or select **Deactivate**.

8.5 Add SOS numbers

The SOS Call function will not work unless the **SOS Num** contains at least one number.

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Care** > **SOS key**.
3. Scroll to **SOS Num** and press **OK**.
   The screen will show a list of stored numbers or **Empty**.
4. Scroll to the entry you wish to add an SOS number and press **Option**.
   You can add up to 5 numbers.
5. Enter the user name using the keypad.
6. Press **Option** and then **OK** to confirm it is done.
7. Press , enter the phone number and then press **OK** to confirm.
8. Press **Yes** to save the entry.

8.6 Edit SOS numbers

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Care** > **SOS key**.
3. Scroll to **SOS Num** and press **OK**.
4. Scroll to the entry you wish to edit and press **Option**.
5. Press **OK** to edit the entry.
6. Press **Edit** to modify the user name.
   Press **Clear** *to delete the character before the cursor; press* or *to move the cursor.*
7. When you have modified the name, press **Option** and then **OK** to confirm it is done.

8. Press and then modify the phone number.
   Press to delete the number before the cursor.
9. When you have changed the phone number, Press **OK**.
10. Press **Yes** to save the changes.

8.7 Delete SOS numbers

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Care** > **SOS key**.
3. Scroll to **SOS Num** and press **OK**.
4. Scroll to the entry you wish to delete and press **Option**.
5. Scroll to **Erase** and press **OK**.
6. Press **Yes** to delete the entry.

8.8 Edit SOS SMS Content

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Care** > **SOS key**.
3. Scroll to **SOS Content** and press **OK**.
   The default message content is displayed.
4. If you wish to change the content, press **Edit**.
   Press **Clear** *to delete the character before the cursor; press and hold* **Clear** *to delete all the characters.*
5. Enter your new message using the keypad.
6. When you have completed the message, press **Option** and then **OK** to confirm it is done.
7. Press **Back** to return to the menu list.

9 QUICK NUMBER FUNCTION

Speakeasy 600 lets you store up to 5 frequently used numbers so that you can easily access these numbers from the home screen.

From the home screen, press ⊖ to access the **Quick Number** list. Scroll to the number you wish to call and press (OK) twice to call the number. *(When you install two SIM cards, you can select SIM1/SIM2 voice call)*

9.1 Add a Quick Number

1. From the home screen, press ⊖ to enter the **Quick Number** list.
2. Scroll to the entry you wish to add a quick number and press (OK) **Option**.
   You can add up to 5 numbers.
3. Enter the user name using the keypad.
4. Press (OK) **Option** then (OK) **OK** to confirm it is done.
5. Press ⊖, enter the phone number and then press (OK) **OK** to confirm.
6. Press (OK) **Yes** to save the entry.

9.2 Call a Quick Number

1. From the home screen, press ⊖ to enter the **Quick Number** list.
2. Scroll to the number you wish to call.
3. Press (OK) **Option** then (OK) **OK** to call the number.

9.3 Edit a Quick Number

1. From the home screen, press ▭ to enter the **Quick Number** list.
2. Scroll to the entry you wish to edit and press (OK) **Option**.
3. Scroll to **Edit** and press (OK) **OK**.
4. If you wish to change the name, press (OK) **Edit**, then modify the user name using the keypad.
   Press (*) **Clear** *to delete character before the cursor.*
5. Press (OK) **Option** then (OK) **OK** to confirm it is done.
6. Press ▭ and then modify the phone number.
   Press (*) **Clear** *to delete the number before the cursor.*
7. Press (OK) **OK** when it is corrected.
8. Press (OK) **Yes** to save the changes.

9.4 Delete a Quick Number

1. From the home screen, press ▭ to enter the **Quick Number** list.
2. Scroll to the entry you wish to delete and press (OK) **Option**.
3. Scroll to **Delete** and press (OK) **OK**.
4. Press (OK) **Yes** to confirm deletion.

10 USING THE PHONEBOOK & SETTING SPEED DIALS

You can save names and phone numbers in the SIM1/SIM2 card memories or the phone memory. You can store up to 300 names and numbers in the phone memory, but the total number of entries you can store in the SIM cards depends on the capacity of your SIM card memories.

10.1 Add a number to the phonebook

1. From the home screen, press to access the **Phonebook** list.
   New Entry is highlighted.
2. Press **Option** then **OK**.
3. Enter the name using the keypad.
4. Press and then enter the phone number.
5. Press **Option** and then scroll to your preferred storage location (**To SIM1**, **To SIM2** or **To phone**).
6. Press **OK** and then **Yes** to save the new entry.

10.2 Call a contact from the phonebook

1. From the home screen, press to access the **Phonebook** list.
2. Scroll to the name you want to call, press **Option** and then **OK** to dial the number. *(When you install two SIM cards, you can select SIM1/SIM2 voice call)*

Note: Instead of scrolling, you can go straight to a contact by entering the contact's name.

10.3 Edit a phonebook entry

1. From the home screen, press to access the **Phonebook** list.
2. Scroll to the entry you wish to edit.
3. Press **Option**, scroll to **Edit** and press **OK**.
4. Edit the name using the keypad.
5. Press and edit the phone number.
6. Press **Option** and then **Yes** to save the modified entry.

10.4 Delete a phonebook entry

1. From the home screen, press to access the **Phonebook** list.
2. Scroll to the entry you wish to delete.
3. Press **Option**, scroll to **Delete** and press **OK**.
4. Press **Yes** to confirm deletion.

10.5 Set speed dial numbers

1. From the home screen, press to access the **Phonebook** list.
2. Press **Option**, scroll to **Setup** and press **OK**.
3. Scroll to **Speed dial** and press **OK**.
4. Scroll to **Set numbers** and press **OK**.
5. Scroll to the entry (2 to 9) you wish to add a speed dial number and press **Edit**.
6. Scroll to the entry in the Phonebook that you wish to add as a speed dial number and press **OK**.
7. Press **Yes** to save the new speed dial number.

10.6 Turn speed dial on or off

1. From the home screen, press to access the **Phonebook** list.
2. Press **Option**, scroll to **Setup** and press **OK**.
3. Scroll to **Speed dial** and press **OK**.
4. Scroll to **Status** and select **On** or **Off** to set the status.

10.7 Set My number

1. From the home screen, press to access the **Phonebook** list.
2. Press **Option**, scroll to **Setup** and press **OK**.
3. Scroll to and select **My number** > **Edit my number**.
4. Enter the name using the keypad.
5. When you have finished entering the name, press **Option** and then **OK** to confirm it is done.
6. Press and then enter the phone number. Press **OK** when it is done.
7. Press **Yes** to save the entry.

10.8 Send My number

1. From the home screen, press to access the **Phonebook** list.
2. Press **Option**, scroll to **Setup** and press **OK**.
3. Scroll to and select **My number** > **Send my number**.
4. Scroll to send **As text message**, **As multimedia message** or **Via Bluetooth** and press **OK**.
5. Follow the onscreen instructions to send your number to another device.

10.9 Set extra numbers

1. From the home screen, press to access the **Phonebook** list.
2. Press **Option**, scroll to **Setup** and press **OK**.
3. Scroll to **Extra numbers** and press **OK**.
4. Scroll to **SIM1 owner numbers**, **SIM2 owner numbers**, **SIM1 fixed dial** or **SIM2 fixed dial** and press **OK**.
5. Follow the onscreen instructions to set the extra numbers.

10.10 Check memory status

1. From the home screen, press to access the **Phonebook** list.
2. Press **Option**, scroll to **Setup** and press **OK**.
3. Scroll to **Memory status** and press **OK**.
   The percentage of memory used in your SIM1, SIM2 and Phone is displayed.

10.11 Copy Phonebook contacts

1. From the home screen, press to access the **Phonebook** list.
2. Press **Option**, scroll to **Setup** and press **OK**.
3. Scroll to **Copy contacts** and press **OK**.
4. Scroll to **SIM1 to phone**, **Phone to SIM1**, **SIM2 to phone**, **Phone to SIM2**, **SIM1 to SIM2** or **SIM2 to SIM1** and press **OK**.

5. Press **Yes** to proceed and copy all the contacts as specified.

10.12 Move Phonebook contacts

1. From the home screen, press to access the **Phonebook** list.
2. Press **Option**, scroll to **Setup** and press **OK**.
3. Scroll to **Move contacts** and press **OK**.
4. Scroll to **SIM1 to phone**, **Phone to SIM1**, **SIM2 to phone**, **Phone to SIM2**, **SIM1 to SIM2** or **SIM2 to SIM1** and press **OK**.
5. Press **Yes** to proceed and move all the contacts as specified.

10.13 Delete All Phonebook contacts

1. From the home screen, press to access the **Phonebook** list.
2. Press **Option**, scroll to **Setup** and press **OK**.
3. Scroll to **Delete all contacts** and press **OK**.
4. Scroll to **From SIM1**, **From SIM2** or **From phone** and press **OK**.
5. Enter the password. (Default: 0000)
6. Press **OK** to confirm and all the contacts will be deleted, as specified.

11.1 Write and send SMS

SMS enables you to send text messages to another party, using Short Messaging Service (SMS). You can use the **Messaging** menu to send messages to another mobile phone or a device that is capable of receiving SMS messages. To compose and send an SMS message, follow the steps below:

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Messaging** > **SMS** > **Write message**.
3. Enter the text message using the keypad or select **Option** > **Insert template** to use a template message (see *Message Templates on page 38*).
4. When your message is complete, select **Option** > **Send to**.
5. Select **New number** to enter the recipient's number manually or select **Phonebook** to add a recipient from the **Phonebook**. Press **OK**.
6. Press **Option** to access the following options:
   Send
   Edit recipient
   Remove recipient
   Remove all recipients
   Save to Drafts
7. Scroll to **Send** and press **OK** to send the message, or select one of the other options, or press **Back** to cancel sending.

11.2 Manage your SMS

Your messages are sorted in the following folders:

Inbox:	received messages
Sent messages:	sent messages (provided **Save sent messages** is set; see ***Save Sent message on page 38***)
Drafts:	messages saved as drafts
Outbox:	unsuccessfully sent messages

11.2.1 Inbox

1. From the home screen, press ⊖ to enter the main menu.
2. Scroll to and select **Messaging** > **SMS** > **Inbox**.
3. Scroll to **SIM1 Inbox** or **SIM2 Inbox** and press (OK) **OK**.
4. Scroll to a message and press (OK) **OK** to read it.
5. Press (OK) **Option** to access the following options:
   Reply
   Call sender
   Forward
   Delete
   Delete all
   Advanced

11.2.2 Drafts

1. From the home screen, press ⊖ to enter the main menu.
2. Scroll to and select **Messaging** > **SMS** > **Drafts**.
3. Scroll to a message and press (OK) **OK** to read it.

4. Press **OK** **Option** to access the following options:
   Send
   Edit
   Delete
   Delete all
   Advanced

11.2.3 Outbox

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Messaging** > **SMS** > **Outbox**.
3. Scroll to **SIM1 Outbox** or **SIM2 Outbox** and press **OK** **OK**.
4. Scroll to a message and press **OK** to read it.
5. Press **OK** **Option** to access the following options:
   Resend
   Edit
   Delete
   Delete all
   Advanced

11.2.4 Sent messages

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Messaging** > **SMS** > **Sent messages**.
3. Scroll to **SIM1 Sent** or **SIM2 Sent** and press **OK** **OK**.
4. Scroll to a message and press **OK** to read it.

5. Press **Option** to access the following options:
   Forward
   Delete
   Delete all
   Advanced

11.3 SMS settings

Some of your SMS settings are dependent on the service you subscribe with the network provider. Consult your network provider for more information regarding the settings.

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Messaging** > **SMS** > **Setup**.
3. Scroll to **SIM1 message settings** or **SIM2 message settings** and press **OK**.

Profile settings	Activate/deactivate a default message profile or set up a new profile.
Voicemail server	Set up your voicemail server or call voicemail server
Common settings	Enable or disable **Delivery report**, **Reply path**, **Save sent message**
Memory status	Check available SMS memory in your SIM card or phone.
Preferred storage	Set the preferred storage location for your SMS: **SIM** or **Phone**

11.3.1 Save Sent message

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Messaging** > **SMS** > **Setup**.
3. Scroll to **SIM1 message settings** or **SIM2 message settings** and press **OK**.
4. Scroll to **Common settings** and press **OK**.
5. Scroll to **Save sent message** and select **On** or **Off** to set the function.

11.4 Message Templates

There are 10 preset SMS messages on the phone, which you can change if you wish.

11.4.1 Edit Template

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Messaging** > **SMS** > **Setup**.
3. Scroll to **Templates** and press **OK**.
4. Scroll to the template you wish to edit and press **Option**.
5. Scroll to **Edit** and press **OK**.
6. Edit the template using the keypad.
   Press **Clear** to delete the character before the cursor or press and hold **Clear** to delete all characters.
7. Press **Option** and then **OK** to save the changes.

11.5 Remove Template

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Messaging** > **SMS** > **Setup**.
3. Scroll to **Templates** and press **OK**.
4. Scroll to the template you wish to edit and press **Option**.
5. Scroll to **Remove** and press **OK**.
6. Press **Yes** to confirm the removal.

12.1 Create and Send MMS

To compose and send an MMS message, follow the steps below:

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Messaging** > **MMS** > **Write message**.
3. Press **Edit** to add recipients.
4. Select **Add number** to enter the recipient's number manually or search for the recipient from the phonebook. Press **OK** when done.
   or
   Select **Add Email** to enter the recipient's email address. Press **Option** and **OK** when done.
5. To add more recipients or edit or delete recipients, press **Option** and select **Add number**, **Add Email**, **Edit** or **Delete**.
6. Press **Done** when the recipients are complete.
7. Press and add recipients that you want to send a copy of the MMS.
8. Press and add recipients that you want to send a blind copy of the MMS.
9. Press and add MMS subject.
10. Press to **Edit content** and press **Edit**.

11. Enter the MMS message and press **Option** to:
    Done
    Input method
    Add picture
    Add audio
    Add video
    Add attachment
    Add slide before
    Add slide after
    Add bookmark
    Preview
    Slide time
12. Scroll to **Done** and press **OK**.
13. Press **Done**, then scroll to your preferred send option and press **OK**.

12.2 MMS Settings

Some of your MMS settings are dependent on the service you subscribe with the network provider. Consult your network provider for more information regarding the settings.

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Messaging** > **MMS** > **MMS settings**.
3. Scroll to **Profiles** and press **OK**.
4. Scroll to **SIM1** or **SIM2** and press **OK**.
5. Scroll to your preferred profile and press **Option** to:
    Activate
    Edit
    Delete

5. Press **Back** to exit, scroll to **Common settings** and press **OK**.

Compose	Set **MMS Creation mode**, **Picture resizing**, **Best page time**, **Auto signature** and **Signature**
Send	Set **Validity period**, **Delivery report**, **Read report**, **Priority**, **Slide time** and **Delivery time**
Retrieve	Set retrieval preference in **Home network** or **Roaming**; set preference for **Read report**, **Delivery report**
Filter	Set filter for MMS from **Anonymous** sender or **Advertisement**
Memory status	Check memory usage

6. Press **Done** and then **Yes** to save.

12.3 Manage your MMS

Your messages are sorted in the following folders:

Inbox:	received messages
Drafts:	messages saved as drafts
Outbox:	unsuccessfully sent messages

12.3.1 Inbox

1. From the home screen, press ⊟ to enter the main menu.
2. Scroll to and select **Messaging** > **MMS** > **Inbox**.
3. Scroll to a message and press OK **OK** to read it.
4. Press OK **Option** to access the following options:
   View
   Reply
   Call sender
   Forward
   Delete
   Delete all
   Properties
   Use details

12.3.2 Drafts

1. From the home screen, press ⊟ to enter the main menu.
2. Scroll to and select **Messaging** > **MMS** > **Drafts**.
3. Scroll to a message and press OK **Option**.
4. Press OK **OK** to view the message or scroll to the following options:
   View
   Send
   Edit
   Delete
   Delete all
   Properties
   Use details

12.3.3 Outbox

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Messaging** > **MMS** > **Outbox**.
3. Scroll to a message and press **Option**.
4. Press **OK** to view the message or scroll to the following options:
   View
   Send
   Delete
   Delete all
   Properties
   Use details

13 BROADCAST MESSAGES

Broadcast messages are public messages broadcast to mobile users. Please contact your network provider for a list of channel numbers and their broadcast information.

13.1 Broadcast message settings

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Messaging** > **SMS** > **Broadcast message**.
3. Scroll to **SIM1 broadcast message** or **SIM2 broadcast message** and press **OK** to access the following options:

Receive mode	Turn receive mode on or off.
Read message	Read messages when there are received broadcast messages.
Languages	Set languages for broadcast messages.
Channel settings	Add channel for broadcast messages.

4. Press **Done** and then **Yes** to save any changes.

14 CALL HISTORY

Call history provides you with records of your incoming, outgoing and missed calls. It includes a call settings option that allows you to set call-related options.

14.1 Check Call history

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Call history**.
3. Scroll to **SIM1 history** or **SIM2 history** and press **OK**.
4. Scroll to the following options and press **OK** to check:

Missed calls	
Dialled calls	
Received calls	
Call timers	Check **Last call**, **Dialled calls**, **Received calls** or **Reset all**
GPRS counter	Check **Last sent**, **Last received**, **All sent**, **All received** or **Reset counter**
Delete call logs	

5. Scroll to an entry in the call history and press **Option** to:
   - **Call**
   - **View**
   - **Send text message**
   - **Send multimedia message**
   - **Save to phonebook**
   - **Add to Blacklist**
   - **Edit before call**
   - **Delete**

15.1 Basic call settings

1. From the home screen, press ⊂ to enter the main menu.
2. Scroll to and select **Call history** > **Call settings**.
3. Scroll to **SIM1 call settings** or **SIM2 call settings** and press (OK) **OK** to set the following options:

Caller ID	Select **Hide ID**, **Send ID** or **Set by network**
Call waiting	**Activate**, **Deactivate** or **Check status** of call waiting function
Call divert	Set call divert: **Divert all voice calls**, **Divert if unreachable**, **Divert if no answer**, **Divert if busy**, **Divert all data calls**, or **Cancel all diverts**
Call barring	Set call barring: **Outgoing calls**, **Incoming calls**, **Cancel all**, **Change barring password**
Line switching	Switch between **Line 1** or **Line 2**

Note: The options above are network functions and some options may not be available with your SIM card. Check with your network service provider.

15.2 Advanced Call settings

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Call history** > **Call settings**.
3. Scroll to **Advance settings** and press **OK** to set the following options:

Call Firewall Settings	Add phone numbers to Blacklist, White List, Block Unknown numbers or Block Anonymous numbers, Limit incall firewall. Set the Black list/White list/Firewall on or off.
Auto redial	Enable or disable auto redial
Call time display	Enable or disable call time display
Call time reminder	Enable or disable call time reminder
Auto quick end	Enable or disable auto quick end

16.1 FM Radio

IMPORTANT! The supplied earphones work as an antenna for the FM radio. You must plug in the supplied earphones to listen to the radio.

16.1.1 Auto tune

1. From the home screen, press ⊟ to enter the main menu.
2. Scroll to and select **Multimedia** > **FM radio**.
3. Press [OK] **Option**.
4. Scroll to **Auto search** and press [OK] **OK**.
5. Press [OK] **Yes** to start the auto search.
   Stations found will be saved in the Channel list and the radio will start playing the first station from the Channel list.

16.1.2 Manual tune

1. From the home screen, press ⊟ to enter the main menu.
2. Scroll to and select **Multimedia** > **FM radio**.
3. Press [OK] **Option**.
4. Scroll to **Manual input** and press [OK] **OK**.
5. Enter the station frequency in MHz and press [OK] **OK**.
   Press [#] to enter a decimal point, ".".
6. Press [OK] **OK** to start listening to that station.

16.1.3 Select from the Channel list

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Multimedia** > **FM radio**.
3. Press **Option**.
4. Scroll to **Channel list** and press **OK**.
5. Scroll to your preferred station and press **Option**.
6. Scroll to **Play** and press **OK** to start listening to that channel.

16.1.4 Enable / Disable Background play

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Multimedia** > **FM radio**.
3. Press **Option**.
4. Scroll to and select **Settings** > **Background play**.
5. Press or to toggle **On** or **Off**.
6. Press **OK** to confirm the setting.

16.1.5 Play the radio through the loudspeaker

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Multimedia** > **FM radio**.
3. Press **Option**.
4. Scroll to and select **Settings** > **Loudspeaker**.
5. Press or to toggle **On** or **Off**.
6. Press **OK** to confirm the setting.

16.1.6 Record a radio broadcast

Note: You may need a memory card installed for long recordings.

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Multimedia** > **FM radi**o.
3. Press **Option**.
4. Scroll to **Record** and press **OK**.
   Recording begins.
5. Press **Pause** to pause recording and press **Stop** to stop recording.
6. Modify the filename, if required. Press **Clear** to delete existing entries and enter filename using the keypad.
7. Press **Option** and then **OK** to save the recording.
8. Continue listening to the radio or press **Back** to exit.

16.1.7 Set recording format

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Multimedia** > **FM radio**.
3. Press **Option**.
4. Scroll to **Settings** > **Record format**.
5. Press or to select your preferred format.
6. Press **OK** to confirm the setting.

17.1.8 Set audio quality

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Multimedia** > **FM radio**.
3. Press **Option**.
4. Scroll to **Settings** > **Audio quality**.

5. Press [*] or [#] to select your preferred quality.
6. Press [OK] **OK** to confirm the setting.

17.1.9 Record storage

1. From the home screen, press [Menu] to enter the main menu.
2. Scroll to and select **Multimedia** > **FM radio**.
3. Press [OK] **Option**.
4. Scroll to **Settings** > **Record storage**.
5. Press [*] or [#] to select your preferred storage location, if available.
6. Press [OK] **OK** to confirm the storage location.

16.2 Camera

Speakeasy 600 comes with a digital camera that allows you to take pictures (up to 1.3 Megapixels).

17.2.1 Take photos

1. From the home screen, press [Menu] to enter the main menu.
2. Scroll to and select **Multimedia** > **Camera**.
3. Press [5] to take photo.
   The photo is automatically saved in **Image viewer** *(see* ***View captured photos on page 53****).*
4. Press [End] to exit.

16.3 Zooming in and out

1. From the home screen, press [Menu] to enter the main menu.
2. Scroll to and select **Multimedia** > **Camera**.
3. Press [Menu] to zoom in or press [Down] to zoom out.
4. Press [5] to take photo.
5. Press [End] to exit.

16.3.1 Adjust camera exposure

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Multimedia** > **Camera**.
3. Press to reduce exposure or press to increase exposure.
4. Press to take photo.
5. Press to exit.

16.3.2 View captured photos

The photos you have taken are automatically saved in **Image viewer**.

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Multimedia** > **Image viewer**.
3. Scroll to the photo you wish to view and press **Option**.
4. Press **OK** to view the photo.
5. Press or to view the previous or next photo.
6. Press **Back** to exit.

16.4 Adjust camera settings

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Multimedia** > **Camera**.
3. Press to enter the options menu and scroll to the setting you wish to adjust:

Camera settings	1. Press or to adjust the settings. 2. Press **OK** to confirm.

Image settings	**1.** Press * or # to adjust the settings. **2.** Press OK **OK** to confirm.
White balance	**1.** Press ⌐ or ¬ to adjust the settings. **2.** Press OK **OK** to confirm.
Scene mode	**1.** Press ⌐ or ¬ to adjust the settings. **2.** Press OK **OK** to confirm.
Effect settings	**1.** Press ⌐ or ¬ to adjust the settings. **2.** Press OK **OK** to confirm.
Storage	Select your preferred storage location and press OK **OK** to confirm.
Restore default	Press OK **Yes** to restore or press) **No** to exit.

16.5 Video recorder

Speakeasy 600 comes with a video recorder that allows you to record short video clips.

Note: You will need a memory card installed for video recordings.

16.5.1 Record video

1. From the home screen, press ⌐ to enter the main menu.
2. Scroll to and select **Multimedia** > **Video recorder**.

3. Press 5 to start recording.
4. Press 5 to pause/continue recording.
   The video clip is automatically saved in **Video player** *(see* ***View recorded videos on page 55****).*
5. Press • and then OK **Yes** to save the video.

16.6 Zooming in and out

1. From the home screen, press ⌐ to enter the main menu.
2. Scroll to and select **Multimedia** > **Video recorder**.
3. Press ⌐ to zoom in or press ⌐ to zoom out.
4. Press 5 to start recording.
5. Press 5 to pause/continue recording.
6. Press • and then OK **Yes** to save the video.

16.7 Adjust camcorder exposure

1. From the home screen, press ⌐ to enter the main menu.
2. Scroll to and select **Multimedia** > **Video recorder**.
3. Press * to reduce exposure or press # to increase exposure.
4. Press 5 to start recording.
5. Press 5 to pause/continue recording.
6. Press • and then OK **Yes** to save the video.

16.8 View recorded videos

The video clips you have recorded are automatically saved in **Video player**.

1. From the home screen, press ⌐ to enter the main menu.
2. Scroll to and select **Multimedia** > **Video player**.

3. Scroll to the video clip you wish to view and press **Option**.
4. Press **OK** to view the video clip.
5. Press to exit.

16.9 Adjust camcorder settings

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Multimedia** > **Video recorder**.
3. Press to enter the options menu and scroll to the setting you wish to adjust:

Camcorder settings	1. Press **OK** then press or and or to adjust the settings. 2. Press **OK** to confirm.
Video settings	1. Press **OK** then press or and or to adjust the settings. 2. Press **OK** to confirm.
White balance	1. Press **OK** then press or to change the setting. 2. Press **OK** to confirm.
Effect settings	1. Press **OK** then press or to change the setting. 2. Press **OK** to confirm.

Storage	Press **OK** then or to select your preferred storage location and then press **OK** to confirm.
Restore default	Press **OK** then press **Yes** to restore or press **No** to exit.

16.10 Audio player

Note: You will need a memory card installed that contains the audio files (mp3).

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Multimedia** > **Audio player**.
3. Press **List** to show a list of the available songs.
4. Scroll to the track you wish to play, then press **Option** to show the following options:

Play	Press **OK** to play the song. Press to pause/restart, press to stop. Press to skip back to the previous song. Press to skip forward to the next song.
Details	Press **OK** to show details of the size, time, title, artist and genre of the song.
Add to ringtones	Press **OK** to add the song to your list of ring tones.
Refresh list	Press **OK** to refresh the song list.

Settings	Press (OK) **OK** to change the source of the playlist (**Pre. playlist**), list auto generation (**List auto gen.**), to repeat play (**Repeat**), to shuffle play (**Shuffle**), to continue playing in the background (**Background play**), Bluetooth settings, Lyrics display. **Note:** **List auto gen.** must be turned off to transfer songs to the playlist from the memory card.

16.11 Sound recorder

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Multimedia** > **Sound recorder**.
3. Press **Option** to show the following options:

New record	Press **OK** to start recording. Press **Pause** to pause recording or **Stop** to stop recording and then press **Yes** to save the audio.
List	Press **OK** to list the audio clips you have recorded. You can then choose to **Play**, **Append**, **Rename**, **Delete**, **Delete all files**, **Use as** or **Send**.
Settings	Press **OK** then or and or to set the storage location and audio file format.

17 USER PROFILES

User Profiles provides you with four options for quick changes to the phone sounds when in different places. Each profile can be personalised to give different sounds for your Speakeasy 600 according to your situation.
There are 4 preset profiles – General, Meeting, Outdoor and Bluetooth. Each profile includes the following settings:

- ✓ Tone settings
- ✓ Volume
- ✓ Alert type
- ✓ Ring type
- ✓ Extra tone

Note: You cannot select **Bluetooth**. When you connect a Bluetooth earphone, the phone will switch to Bluetooth profile automatically.

You can use the default settings or customise them as desired.

17.1 Activate a User profile

1. From the home screen, press ⊂ to enter the main menu.
2. Scroll to **User profiles** and press (OK) **OK**.
3. Scroll to your preferred profile and press (OK) **Option**.
4. Press (OK) **OK** to activate the profile.

17.1.1 Customise a User profile

1. From the home screen, press ⊂ to enter the main menu.
2. Scroll to **User profiles** and press (OK) **OK**.
3. Scroll to the profile you wish to customise and press (OK) **Option**.

4. Scroll to **Customize** and press **OK**.
5. Scroll to the function you want to change and press **OK**.

Tone settings	Set alert tone for **SIM1/SIM2 incoming call**, **Alarm**, **Power on**, **Power off**, **Cover open**, **Cover close**, **SIM1/SIM2 message** and **Keypad**
Volume	Set volume for the **Ringtone** and **Key tone**
Alert type	Set the alert type: **Ring only** - ringer on, no vibrate **Vib. only** - ringer silent, vibrate on **Vib. and ring** - ringer on, vibrate on **Vib. then ring** - initially only vibrate, then ringer on as well
Ring type	Set ring type: **Single**, **Repeat**, **Ascending**
Extra tone	Enable/disable alert tone for **Warning**, **Error**, **Camp on**, **Connect**

6. Press or and press **OK**/**Select**/**Off**/**On**/**Back** to move to and/or adjust the settings.
7. Press **OK** to confirm and save the settings (or press **Back** for **Extra tone** setting.)

1. From the home screen, press to enter the main menu.
2. Scroll to **Settings** and press **OK**.
3. Scroll to the setting you wish to adjust and press **OK**.

18.1 Dual SIM settings

1. Scroll to the option you want and press **OK** to confirm.

Dual SIM open	If you have inserted two SIM cards, select this option to activate both SIM cards on your phone.
Only SIM1 open	Select this option if you only want to activate SIM card 1 on your phone.
Only SIM2 open	Select this option if you only want to activate SIM card 2 on your phone.

18.2 Phone settings

1. Scroll to the setting you wish to adjust and press **OK** to confirm.

Time and date	**Set home city**, **time/date**, **format**, or enable/disable **Update with time zone**.
Schedule power on/off	Enable/disable and set up to 4 times for the phone to be switched on/off automatically.
Language	Select a language for your phone.

Display Settings	Select **Wallpaper**, **Screen saver**, **Power on display**, **Power off display**, and enable/disable **Show date and time**, or set **Greeting text** on power up.
Auto update of date and time	Enable/disable **Auto update of date and time**.
LCD backlight	Set **Brightness** and **Time** (duration).

18.3 Network settings

SIM1/SIM2 network settings	Search and select a network, set network selection mode and set network preferences

18.4 Security settings

PIN Code	Enable/disable SIM card lock and set PIN code to avoid unauthorised use of your SIM card (Default password: please check with your network service provider).
Phone lock	Set password protection for your phone. If activated, you are required to enter the password each time you turn on the phone (Default: 0000).

Change password	Change password for phone lock (Default: 0000) and SMS messages (Default: 1234).
Privacy firewall	Set password protection for access to your Phone Book, SMS and Call History (Default: 0000).

18.5 Restore factory settings

Restore your phone settings to their factory default values. You need to enter your phone lock password (Default: 0000).

19 ORGANIZER

The phone comes with a number of useful tools that you can access via the **Organizer** menu.

19.1 Alarm

You can set up to 5 alarms on the phone.

When the alarm rings, press **Stop** to stop the alarm or press **Snooze** to enter snooze mode.

19.1.1 Set an alarm

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Organizer** > **Alarm**.
3. Scroll to the entry where you wish to set an alarm and press **Edit**.
4. Scroll up or down the list and adjust the settings:

On or Off	Press or to set the alarm **On** or **Off**.

Alarm time	Enter the alarm time using the keypad.
Repeat mode	Press or to select **Once**, **Everyday**, or **Custom**. For **Custom**, press , then or to select the day, and **On** or **Off** to set the days for the alarm to sound.
Snooze	Press or to set the snooze duration (**Default**, **1** to **10** minutes)
Alert type	Press or to select the alert type when the alarm time is reached: **Ring only**, **Vib. only**, **Vib. and ring**. **Note:** set ring tone in **User profiles** > **Customize** > **Tone settings** > **Alarm**.

5. Press **Done** and then **Yes** to save the alarm setting.

19.2 Tasks

You can add tasks to the phone to remind you of your important tasks, events or appointments. When the phone issues the task alert, press **OK** to stop the alert or press **Snooze** to reset the reminder for a further 4 minutes.

19.2.1 Set a task

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Organizer** > **Tasks** to see the current list of tasks.

3. Press [OK] **Option** > **Add** to add a new task. (Or just **Add** if there are no stored tasks.)
4. Enter the required information for each setting:

Date	Enter the date for the task using the keypad.
Time	Enter the time for the task using the keypad.
Subject	Enter the task subject using the keypad or choose from **Templates**.
Alarm	Press [*] or [#] to set the task alarm **On**, **5 min before**, **10 min before**, **15 min before**, **30 min before**, **Custom** or **Off**. If you select **Custom**, enter the date and time.
Repeat mode	Press [*] or [#] to select **Once**, **Everyday**, **Custom**, **Weekly**, **Monthly** or **Yearly**. If you select **Custom**, select the days.
Priority	Press [*] or [#] to set **Low**, **Medium** or **High**.
Details	Enter additional task details using the keypad.
Status	Press [*] or [#] to set task status as **Done** or **Undone**.

5. Press [•] **Done** and then [OK] **Yes** to save the task.

19.2.2 Manage the task list

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Organizer** > **Tasks**.
3. Press **Option** to show the following:

View	View details of the current task
Add	Add a new task
Edit	Edit the current task information
Search	Search for a task by time or subject
Delete	Delete the current task
Delete all	Delete all tasks
Jump to date	Go to a certain date
View uncompleted	View all uncompleted tasks
Send Calendar	Send the current task details to another device via text message, multimedia message or Bluetooth
Save as file	Save the current task as a file in file manager

19.3 Bluetooth

Speakeasy 600 supports Bluetooth wireless technology and enables connection to a compatible Bluetooth device. All devices that you have connected to previously are saved in **Paired Devices**.

19.3.1 Connecting to a Bluetooth device

Consult the user documentation of the Bluetooth device to be connected and prepare the Bluetooth device for pairing.

1. From the home screen, press to enter the main menu.
2. Scroll to and select **Organizer** > **Bluetooth**.
3. Scroll to **Power** and press **On** to activate Bluetooth, if it is not already activated.
4. Scroll to **Visibility** and press **On**, if it is not already turned on.
5. Scroll to **Paired Devices** to view previously connected devices.
6. Scroll to **Search device** to search new device.
7. Scroll to **My Phone's name** to edit**.**
8. Scroll to **Advanced** and press **OK**.
9. Scroll to **Search device** and press **OK** to start searching for Bluetooth devices.
   A list of available Bluetooth devices appears.
10. Scroll to the device that you wish to establish a connection with and press **Pair**.
11. Enter the passcode using the keypad on your Speakeasy 600.
    Check that the pairing passcode/passkey on both Speakeasy 600 and the Bluetooth device match.
12. The pairing is made if your pairing request is accepted by the Bluetooth device.

19.3.2 Connect to a previously connected device

1. Check that the Bluetooth function is enabled on the Bluetooth device.
2. On Speakeasy 600, go to **Organizer** > **Bluetooth** > **Paired Devices**.
3. Scroll to the device in the list.
4. Press **Option**, scroll to **Connect** and press **OK**. *The connection is established.*

19.3.3 Rename a device in the device list

To rename a device in the **Paired Devices**:

1. Go to **Organizer** > **Bluetooth** > **Paired Devices**.
2. Scroll to the device in the list.
3. Press **Option** and scroll to **Rename**.
   Press **Clear** *to delete existing name and then rename the device using the keypad.*
4. Press **Option** and then **OK** to save the changes.

19.3.4 Delete a device from the device list

All the devices that you have connected to previously are saved in **Paired Devices**. To delete a device from the list:

1. From the main menu, scroll to and select **Organizer** > **Bluetooth** > **Paired Devices**.
2. Scroll to the device in the list.
3. Press **Option** and scroll to **Delete**.
4. Press **OK** and then **Yes** to confirm deletion.

19.3.5 Getting connected by a Bluetooth device

For a Bluetooth device to connect to your Speakeasy 600, the Bluetooth must be turned on and made visible.

1. From the main menu, scroll to and select **Organizer** > **Bluetooth**.
2. Scroll to **Power** and press OK **On** to activate Bluetooth, if it is not already activated.
3. Scroll to **Visibility** and press OK **On**, if it is not already turned on.
4. The pairing is made when you receive and accept a pairing request from another device (enter the passcode if necessary).

19.3.6 Listen to music or audio files through a Bluetooth headset

Consult the user documentation of the Bluetooth headset. Check that your Bluetooth headset supports A2DP profile (Bluetooth stereo output).

19.4 Calculator

The Organizer provides a calculator for simple addition, subtraction, division and multiplication functions, with a maximum of 10 digits for an entry or answer.

1. From the main menu, scroll to and select **Organizer** > **Calculator**.
2. Enter the first number using the keypad, using #⁵ if you need to enter a decimal point.
3. Press ⌐ or ⌙ to select add, subtract, divide or multiply operation.

4. Enter the second number.
5. Press **OK** to get the results. Press to clear entries.

19.5 Calendar

The Organizer provides a Calendar to check dates and add reminders for important events.

1. From the main menu, scroll to and select **Organizer** > **Calendar**.
2. Press or to go to the previous or next day, or press or to go to the previous week or next week, when viewing the monthly calendar.
3. Press **Option** to:

View	View events of the day
View all	View all events
Add event	Add a new event
Delete event	Delete all events, overdue events or events over a specific period
Jump to date	Go to a specific date
Go to today	View today's date
Go to weekly view	Switch to view as a weekly calendar
Go to monthly view	Switch to view as a monthly calendar

19.6 World clock

The World clock allows you to check the current date and time of many cities around the world and show the position relative to your time zone.

1. From the main menu, scroll to and select **Organizer** > **World clock**.
2. Press or to select the time zone (GMT) or city list, and press or to change the time zone or city. *The date and time is shown and the map shows the position.*
3. Press **Option** to set Daylight saving **On** or **Off**.

19.7 Unit converter

The Unit converter allows you to convert some weights and lengths.

Weight	Kg <->ounce Kg <->pound
Length	Km <-> mile Meter <-> yard Meter <-> foot Cm <-> inch

1. From the main menu, scroll to and select **Organizer** > **Unit converter**.
2. Press or to select from the list and press **OK**.
3. Press or to select the units you want to convert between.
4. Press or to move to the units you want to enter, then key in the amount.

5. Press OK **OK** and the converted amount will appear.

19.8 Currency converter

The currency converter allows you to convert between different currencies based on exchange rates.

1. From the main menu, scroll to and select **Organizer** > **Currency converter**.
2. Enter the exchange rate, using the keypad and press # for decimal point.
3. Press OK **OK**, then * or # to toggle the exchange ratio.
4. Enter the local currency amount and then press OK **OK**. *The foreign currency amount is displayed.*
5. Press • **Reset** to clear the amounts.

19.9 Stopwatch

The Organizer provides a stopwatch function with two modes: a **Typical stopwatch**, with split timing or lap timing, or a **4Way stopwatch** for keeping up to 4 different timers within the main timer.

1. From the main menu, scroll to and select **Organizer** > **Stopwatch**.
2. Scroll to **Typical stopwatch** or **4Way stopwatch** and press OK **OK** to select.
   For **Typical stopwatch**, select **Split timing** or **Lap timing**.

3. Press **Start** to start the stopwatch running and **Pause** to stop it.
   For **Split timing**, press **Split** to add up to 20 split times, which can be saved at the end.
   For **Lap timing**, press **Lap** to add up to 20 lap times, which can be saved at the end.
   The saved Split and Lap timings can be viewed by selecting **View records**.
   For **4Way stopwatch**, press , , , to switch to different timers while the main timer runs.
4. Press **Back** to exit from the stopwatch.

19.10 Fun & Games

A Puzzle game has been pre-installed on your phone.
Press **Help** to learn how to play the game.

1. From the main menu, scroll to and select **Organizer** > **Fun & Games** > **Games**.
2. Press **Puzzle** to view the options: **Continue**, **Start game**, **Game level**, **Best grades** and **Help**.
   Scroll to the option you want and press **OK** to enter.
3. Press **Games settings** to set the **BGM** *(background music)*, **Sound effect** and **Vibration** on or off, or the Volume from **1** to **7**.
4. Press **OK** to save any changes.

19.11 Ebook reader

The Organizer includes an option to view Ebooks saved in your phone. To access Ebooks, you must copy and save the file in the Ebook folder of your phone or SD card memory, and the Ebook must be in .txt format.

1. From the main menu, scroll to and select **Organizer** > **Ebook reader**.
   The display will show the Bookshelf with a list of your books or **No files** *if there are none stored in the memory location set.*
2. If it shows **No files**, you can alter the storage location by selecting **Option** > **Global settings** > **Select storage** to switch between **Phone** and **Memory card**.
3. If it shows a list of books, scroll to the book you want and press **Option**.
4. From this list, you can **Open ebook** to start reading, or select one of the other options - **Clean up bookshelf**, to clear the files created by the system during Ebook reading; **Global settings**, to set the following:

Font size	Press or to select **Small**, **Medium** or **Large**
Scroll by	Press or to select scroll by **Page** or **Line**
Auto scroll	Press or to set auto scroll **On** or **Off**
Scroll speed	Press or to set scroll speed (**1** to **5**)

Full screen	Press or to toggle full screen **On** or **Off**
Encoding	Press or to select text encoding
Alignment	Press or to set **Left** or **Right** text alignment

Book info, to see details of the Ebook;
Delete, to delete the Ebook from the list;
Delete all files, to delete all Ebooks from the list;
Sort by, to sort the list by **Name**, **Type**, **Time**, **Size** or **None**;
Apply global settings, to reset the settings;
Help, to see shortcut keys that can be used during reading.

5. Also, during reading you can press **Option** for the following options:

Find	To find a word in the Ebook
Jump to	To jump to a specific line number in the Ebook
Go to bookmark	To go to a bookmark in the Ebook
Add bookmark	To add a bookmark in the Ebook
Delete bookmark	To delete a bookmark in the Ebook
Book info	To see details of the Ebook – title, size, file format

Settings	To change the settings for reading the Ebook
Apply global settings	To reset the settings
Help	To see shortcut keys that can be used during reading
Close	To close the Ebook and return to the Bookshelf

19.12 File manager

All the files on your phone are stored inside folders in the phone memory or on a micro SD card memory, if inserted. You can add new folders and rename, delete or sort the files and folders.

1. From the main menu, scroll to and select **Organizer** > **File manager**.
2. Select **Phone** or **Memory card**, and press **Option**.
3. Press **OK** to select:

Open	**Audio** **Ebook** **Images** **My Music** **Photos** **Received** **Videos**
Format	Press **Option** to erase all the files and folders you have created and stored in the phone memory.

Note: for the Memory card, when you press (OK) **Open**, it will show all files and folders on the card, not just the ones listed above; and it will also include more options:

Remove	To remove the memory card safely
Rename	To change the card name
Details	To check the total size and free space available on the card

20.1 Access Services

1. From the home screen, press ⊟ to enter the main menu.
2. Scroll to **Services** and press OK **OK**.
3. Scroll to the service you wish to use and press OK **OK**.

20.2 Network provider menu

The availability of the features in this menu depends on whether or not your SIM card supports it. If your SIM card supports the function, the menu will be displayed on the screen.
Follow the onscreen instructions to use the services.

20.3 Internet service

You can use this menu to browse the Internet. Consult your network provider for the service subscription, data account information, and WAP settings.

20.3.1 Browsing the Internet

You can browse the Internet with the following browse options:

Homepage
Bookmarks
Recent pages
Input address
Service inbox
Settings

20.3.2 Settings

You can set the following Internet browsing options:

Select SIM
Profiles
Browser options
Service message settings
Clear cache
Clear cookies

20.4 Data account

This menu lets you add, edit and delete GPRS data accounts used for Internet browsing.

21 SMS REMOTE CONTROL

Anyone with a phone can enable remote settings on your Speakeasy 600 by means of SMS commands. Such remote settings include: Quick numbers, SOS numbers, contacts and alarm clock.

21.1 Set quick number

On another phone, enter: AT+L:name:number:password and then send the message to your Speakeasy 600.
[For example]: AT+L:Jack:13333333333:1234
Jack's quick number is 13333333333.

1. You can store up to 5 quick numbers. If a quick number set by remote SMS and an existing entry has the same name but different number, the existing quick number will be replaced with the new one.
2. When the phone had saved up to 5 quick numbers, and you want to add another quick number with the same name but different number, then the existing quick number will be replaced with the new one. However, if the quick number is completely new, the foremost saved quick number on your Speakeasy 600 will be replaced with the new one.

21.2 Set SOS number

On another phone, enter: AT+S:name:number:password and then send the message to your Speakeasy 600.
[For example]: AT+S:Jack:13333333333:1234
Jack's SOS number is 13333333333.

1. You can store up to 5 SOS numbers. If an SOS number set by remote SMS and an existing entry has

the same name but different number, the existing SOS number will be replaced with the new one.

2. When the phone had saved up to 5 SOS numbers, and you want to add another SOS number with the same name but different number, then the existing SOS number will be replaced with the new one. However, if the SOS number is completely new, the foremost saved SOS number on your Speakeasy 600 will be replaced with the new one.

21.3 Add a new entry

On another phone, enter: AT+P:name:number:password and send the message to your Speakeasy 600.
[For example]: AT+P:Jack:13333333333:1234
Jack's new entry is 13333333333.

1. If this new entry has the same name but different number with an existing entry, the existing entry will not be replaced by the new one.

21.3 Set alarm

On another phone, enter: AT+A:hh:mm:content:password and send the message to your Speakeasy 600.
[For example]: AT+A:06:30:Good morning:1234
The alarm time is 06:30. The content is "Good morning".

1. Time format: 24-hour.
2. The content: not more than 70 characters.

Note:

1. Default password: 1234. It can be changed (See page 64).
2. Above letters (AT+L,AT+S,AT+P,AT+A) have to be entered in capital characters.
3. **Name:** if the length of a name exceeds 15 characters, the 16th character will be cut off; *(New entry is saved in SIM card at first. If the length of a name exceeds 14 characters, the 15th character will be cut off)*.
4. **Number:** if the length of a number exceeds 40 digits, the 41st digit will be cut off.
5. When the phone under remote control receives a remote setting command, the phone will send a message to the controller phone, indicating successful or unsuccessful setting.

The phone cannot be switched on	**1.** Is there any power in the battery? **2.** Is the battery installed properly?
Battery cannot be charged	**1.** Check if the charger is connected to the phone properly. **2.** Is the battery still usable? The performance of the battery will be reduced after several years. **3.** Is the battery completely discharged? The phone needs to be connected to the charger for a while before it has sufficient charge to turn on.
Fails to register to the network	**1.** The signal is too weak, or there may be some radio interference around. Check the signal strength meter on the screen to see whether vertical signal lines are displayed. **2.** Is the SIM card installed properly, poorly contacted or damaged? If the SIM card is damaged, please ask your network provider for replacement.

Cannot call out	**1.** Is the SIM card registered to the network? **2.** Is call barring enabled? **3.** Is calling prohibited due to unpaid call charges? **4.** Have you enabled the FDN function? **5.** Have you selected line 2 though your network provider doesn't provide this service?
Cannot call in	**1.** Is the SIM card registered to the network? **2.** Are incoming calls prohibited due to unpaid call charges? **3.** Is call divert enabled? **4.** Is call barring enabled?
PIN locked	Enter the PUK code supplied with the SIM card to unlock, or contact your network provider.
SIM error	**1.** SIM card is dirty. Clean it. **2.** Reinstall the SIM card. **3.** SIM card is damaged. Replace it.

23 GUARANTEE AND SERVICE INFORMATION

Speakeasy 600 is guaranteed for 12 months from the date of purchase on your sales receipt. The warranty does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, lightning, tampering with the equipment or any attempt to adjust or repair other than through approved agents.

Please keep your original dated sales receipt as proof of warranty. You should also keep the original packing material.

In the unlikely event that you need to return your Speakeasy 600 to our Repair Centre while it is under guarantee, there may be a handling charge.

23.1 Servicing Under Warranty

1. Pack all components of your Speakeasy 600 using the original packaging.
   Remember to include the power adapter.
2. Return the unit to the shop where you made your purchase, making sure you take your original dated sales receipt.

23.2 Servicing After Warranty Has Expired

If the unit is no longer covered under warranty:

1. Pack all components of your Speakeasy 600 using the original packaging.
   Remember to include the power adapter.
2. Call our Service Help Line 0845 345 9677 to obtain a quotation for the repair charges. Our customer service staff will provide you with details on where to send your Speakeasy 600 for repair.
3. Make sure you include the following with your Speakeasy 600:
   - Your name and address
   - A cheque or postal order for the repair charge
   - A brief description of the fault
4. Send your Speakeasy 600 to the address provided by our customer service staff.

24 BATTERY INFORMATION

The rechargeable battery needs several charge and discharge cycles to reach full capacity! When the operating time becomes noticeably shorter than normal, it is time to buy a new battery.

Use only batteries & chargers approved by Binatone and unplug the charger when not in use. **(There is a risk of explosion if the lithium battery is replaced by an incorrect type or is not disposed of correctly.)** Do not leave the battery connected to the charger for more than 24hours; overcharging may shorten its life. If left unused, a charged battery will discharge itself over time.

Temperature extremes affect the battery charge - try to keep the battery between 15°C and 25C°.

Use the battery only for its intended purpose.

Never use a damaged charger or battery.

Keep metal objects away from the battery terminals, as short-circuiting them may damage the battery or the connecting object.

Dispose of batteries according to local recycling regulations, not as household waste and not in a fire.

Operating environment
Follow the regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger, e.g. when driving, on an aircraft, in a petrol station, in a hospital or any other area with warning signs.

Pacemakers
Pacemaker manufacturers recommend keeping at least 20cm between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. This is consistent with independent research by and recommendations of Wireless Technology Research. If you use a pacemaker, don't carry the phone in a breast pocket, use the ear opposite the pacemaker and if you suspect that interference is taking place, switch off your phone immediately.

Hearing aids
Mobile phones may interfere with some hearing aids. In the event of interference, contact your hearing aid provider.

Other medical devices
Any radio transmitting equipment, including mobile phones, may interfere with inadequately protected medical devices. Consult a physician or the medical device supplier to check if it is shielded adequately from external RF energy.

Placing the unit
Do not place the handset in the area over an air bag or in the air bag deployment area.
Parts of the phone are magnetic and may attract small objects, so check there are no sharp items, particularly by the earpiece.
Do not place credit cards or other magnetic storage media near the phone, because information stored on them may be erased.

Emergency calls
All mobile phones use radio signals and coverage in all areas cannot be guaranteed, so never rely solely upon your mobile phone for essential communications (e.g. medical emergencies).
Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. You may need to turn those features off first before you can make an emergency call. Consult this guide and your network service provider.

To make an emergency call:
Ensure the phone is switched on, is in idle mode and has a signal. Some networks require a valid SIM card is fitted.

Dial the emergency number (e.g. 112, 999) and press .
When making an emergency call, remember to give all the necessary information as accurately as possible.
Remember that your wireless phone may be the only means of communication at the scene of an accident - do not cut off the call until given permission to do so.

Standard:	GSM Mobile
Frequency Bands:	GSM 900MHz/DCS1800 MHz Dual Band
Handset Dimensions (closed):	about 102mm x 54mm x 18mm
Battery:	Rechargeable Li-ion, 3.7V, 1050mAh
Handset Weight, including battery:	about 120g
Power Adapter:	Input: AC 100V~240V, 50Hz/60Hz. Output: DC 5V 500mA
Operation Temperature:	-10^{o}C to +40 ^{o}C
Ambient Humidity:	10% to 95%
Storage Temperature:	-20 ^{o}C to +55 ^{o}C
Standby time:	About 300hours*
Talk time:	About 6 hours*

Binatone Telecom plc operates a policy of continuous product improvement, and so reserves the right to make changes to the product and functions without notice.

BINATONE TELECOM PLC
1 Apsley Way London NW2 7HF United Kingdom.
Tel: +44(0) 20 8955 2700 Fax: +44(0) 20 8344 8877
e-mail: binatoneuk@binatonetelecom.co.uk

Binatone

EC Declaration of Conformity

We the manufacturer / Importer : Binatone Telecom Plc
1 Apsley Way London
NW2 7HF, United Kingdom.

Declare under our sole responsibility that the following product

Type of equipment:	GSM Mobile
Model Name:	Speakeasy 600
Country of Origin:	China
Brand:	Binatone

complies with the essential protection requirements of R&TTE Directive 1999/5/EC on the approximation of the laws of the Member States relating to ***Radio Spectrum Matters***, the Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to ***electromagnetic compatibility (EMC)*** and the European Community Directive 2006/95/EC relating to ***Electrical Safety.***
Assessment of compliance of the product with the requirements relating to the essential requirements according to Article 3 R&TTE was based on Annex III of the Directive 1999/5/EC and the following standard:

Radio Spectrum:	EN 301 511 V9.0.2 : 2003
RF	EN 300 328 V1.7.1 : 2006
EMC:	EN 301489-1/V1.8.1 :2008
	EN 301489-7:V1.3.1 :2005
	EN 301489-17:V2.1.1 : 2009
SAR:	EN50360:2001
	EN62209-1:2006
Safety:	EN 60950-1:2006+A11:2009;
Sound Pressure:	EN 50332-1:2000

The product is labelled with the European Approval Marking CE as show. Any Unauthorized modification of the product voids this Declaration.

CE0700

Manufacturer / Importer
(Signature of authorized person)

Signature: (Paul Tsui, Product Operation Director)

London, 20 Jan 2011
Place & Date: